

ALERT REGARDING POTENTIAL SAFETY ISSUE

This alert is only applicable for the product: *Besto Comfort fit Pro 220N*

Besto strives for the highest standard in terms of quality and safety, therefore we want to inform the public about a potential safety issue on a specific batch of lifejackets which are produced in the second quarter of 2022.

Type: *Besto Comfort fit Pro 220N*
Article number: 20427661
DOM (Date Of Manufacturing): 11/2022




REASON FOR THIS ALERT ON A POTENTIAL SAFETY ISSUE

On the affected lifejackets, the side adjuster on which you tighten the waistbelt might slip. This causes the waistbelt to loosen (unintentionally) directly after it has been tightened. In other words, the side adjuster does not hold its grip after the waistbelt is tightened.

We want to determine whether this issue is applicable on your lifejacket, therefore we want these jackets to be returned for inspection and if needed correction purposes.

Again: no other products are affected with this issue.
en anders dan deze serie.

How to inspect your lifejacket:

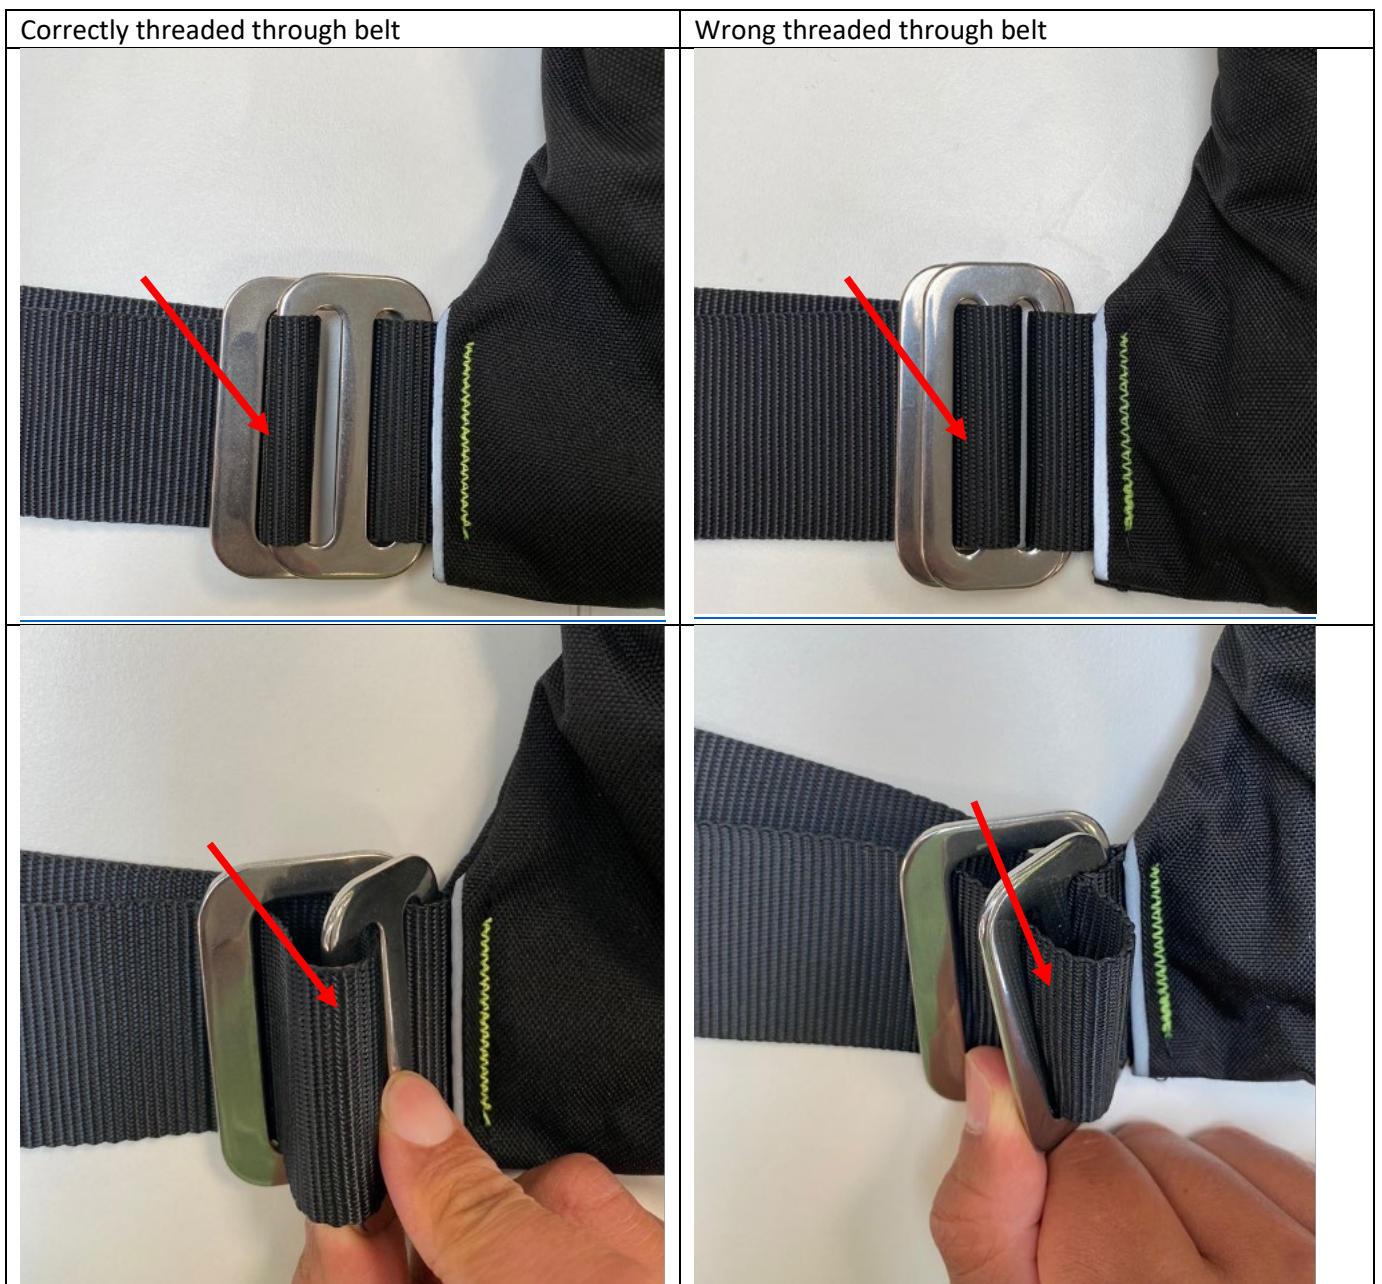

Click on the link for an instruction video: [video link](#)

SERIE NUMBES OF THE POTENTIALLY AFFECTED LIFEJACKETS

Besto Comfort fit Pro 220N, Anthracite

- Serie numbers: 2517370 – 2517519
- dom date: II/2022
- artikel nummer: 20427661

Note: it only concerns these 150 jackets and NO other jackets of this type or other Besto jackets!


The serie numbers of the potentially affected lifejackets are stated above. Only the lifejackets within the serie number range need to be returned for inspection. The owners of these lifejackets cannot actively use their lifejackets if they have not yet been inspected. Return the lifejacket(s) to the store the lifejacket(s) have been bought or send them directly to Lankhorst Taselaar BV for inspection. Should the owners of these lifejackets have any questions on forehand, please don't hesitate to contact us via the below contact details.

- info@bestolifesaver.com
- 0031-522278140

WHERE TO FIND THE DOM DATE AND SERIE NUMBERS ON THE LIFEJACKET(S)

1. Location of the DOM (Date Of Manufacturing).

The DOM is stated on the barcode sticker on the mesh- / carrying bag.

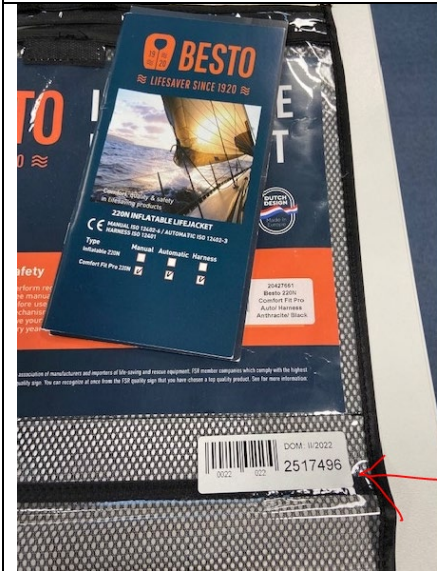

The DOM is also stated on the infolabel inside the lifejacket (on the same side as the mechanism).



2. Location of the unique serie number of the lifejacket.

This is a unique number per lifejacket and thus varies on every lifejacket.

The unique serienumber can be found on the infolabel inside the lifejacket.



HOW TO REACH THE INFOLABEL AT THE INSIDE OF THE LIFEJACKET

The serie number can be found by placing the lifejacket on a flat surface with the frontside facing up, open the lifejacket at the right side. The serie number is located on the white label (info label) which is attached to the yellow bladder material.

1. Place the lifejacket face-up on a flat surface.



2. Pull out the zipper end from the bottom of the lifejacket.



3. Open the zipper by pulling the puller upwards.



4. Now you should see the white info label. Unfold the bladder when the info label is underneath.



5. Location DOM.



6. Location serie number.



7. Fold the bladder back and close the zipper by pulling the puller back down.

For folding instructions, please check the user manual.



8. Tuck away the zipper end in the bottom of the lifejacket. Check whether the indicators are visible through the window and whether they both indicate green.



